


Water Quality Monitor


Q46-84 Hydrogen Peroxide Monitor

STANDARD SYSTEM

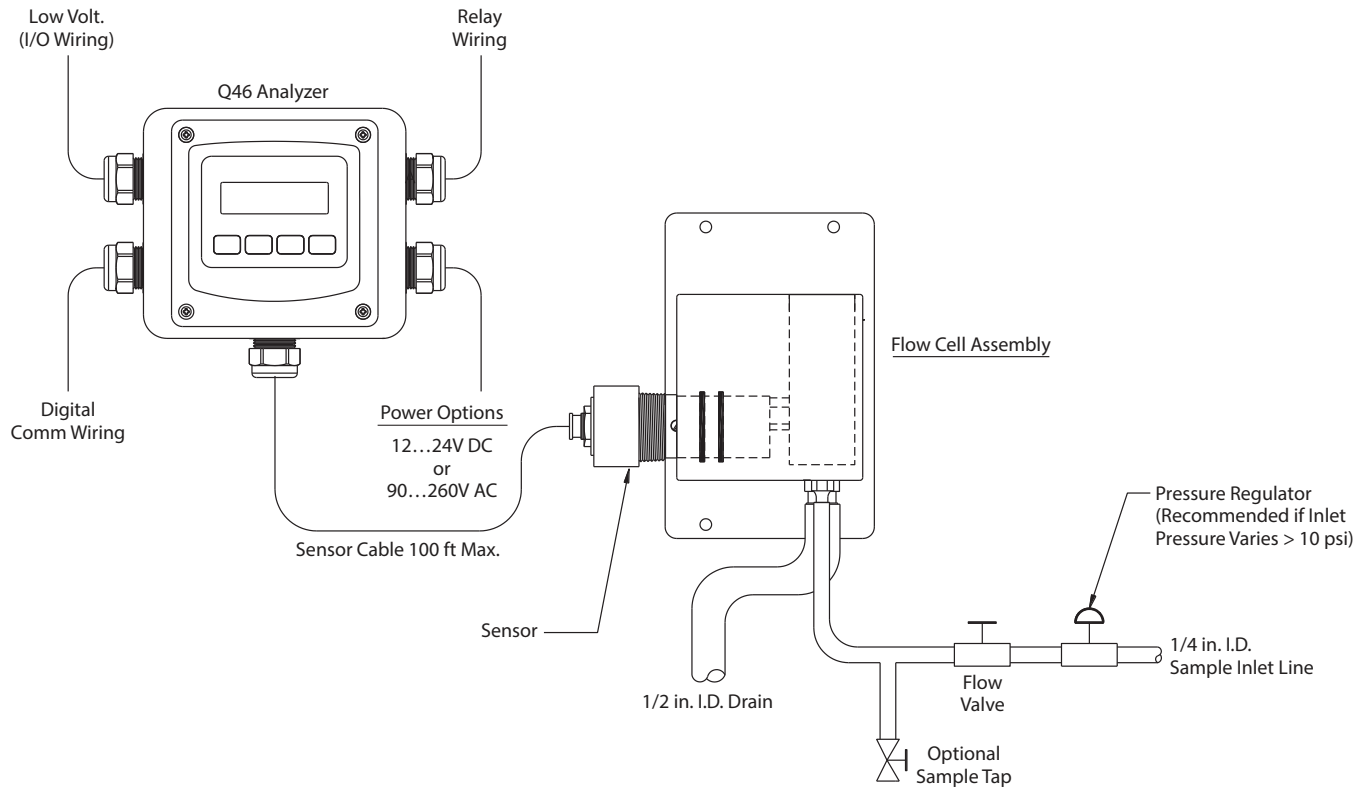


ATi-0922

STANDARD DIAGRAM WITH SEALED FLOW CELL

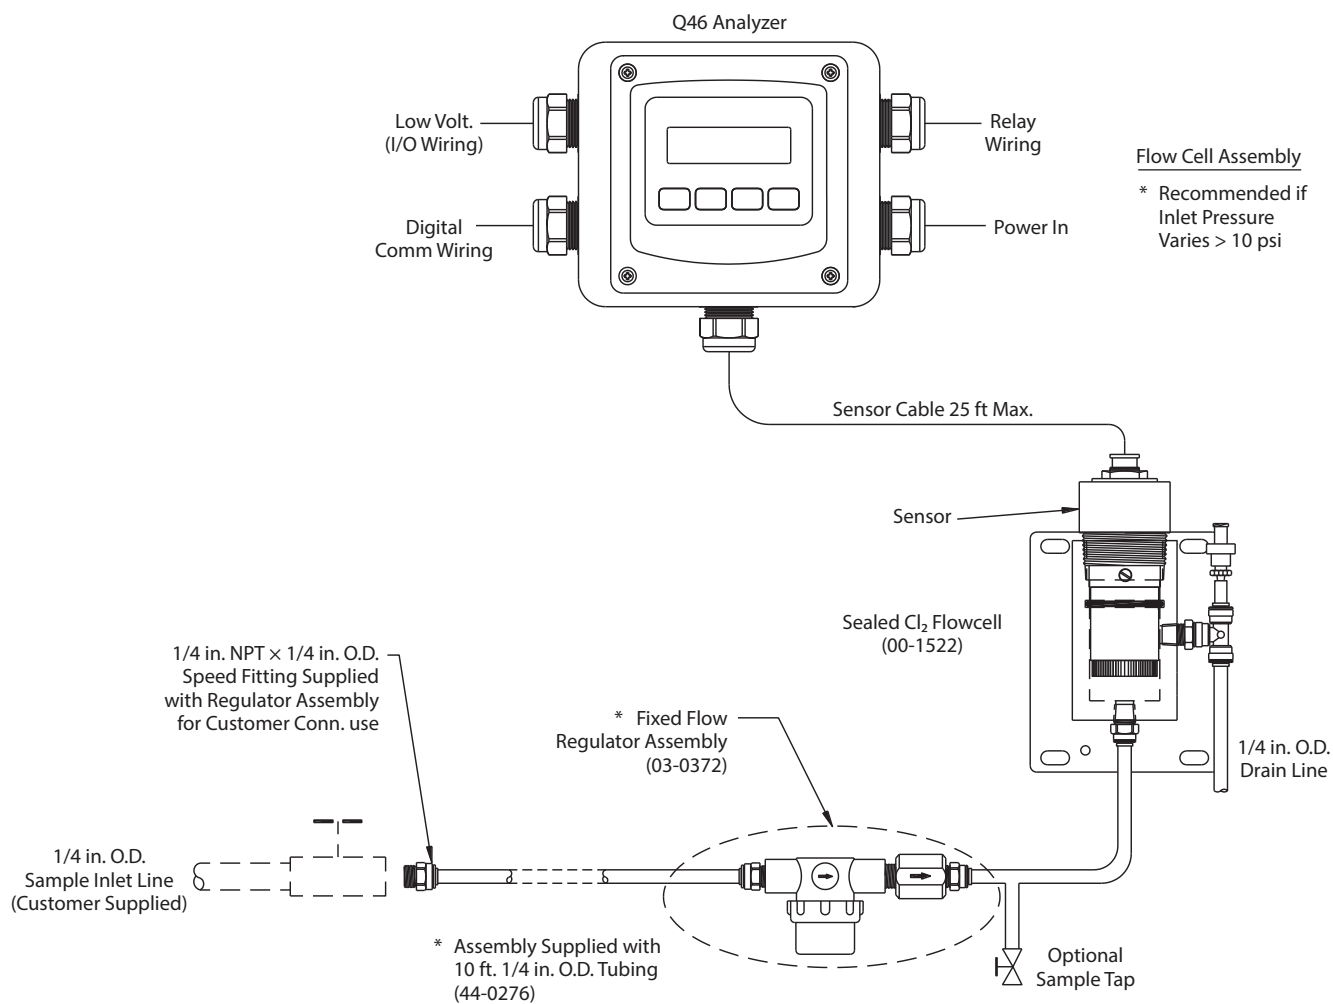


ATi-0924

SYSTEM MOUNTING PLATE ASSEMBLY

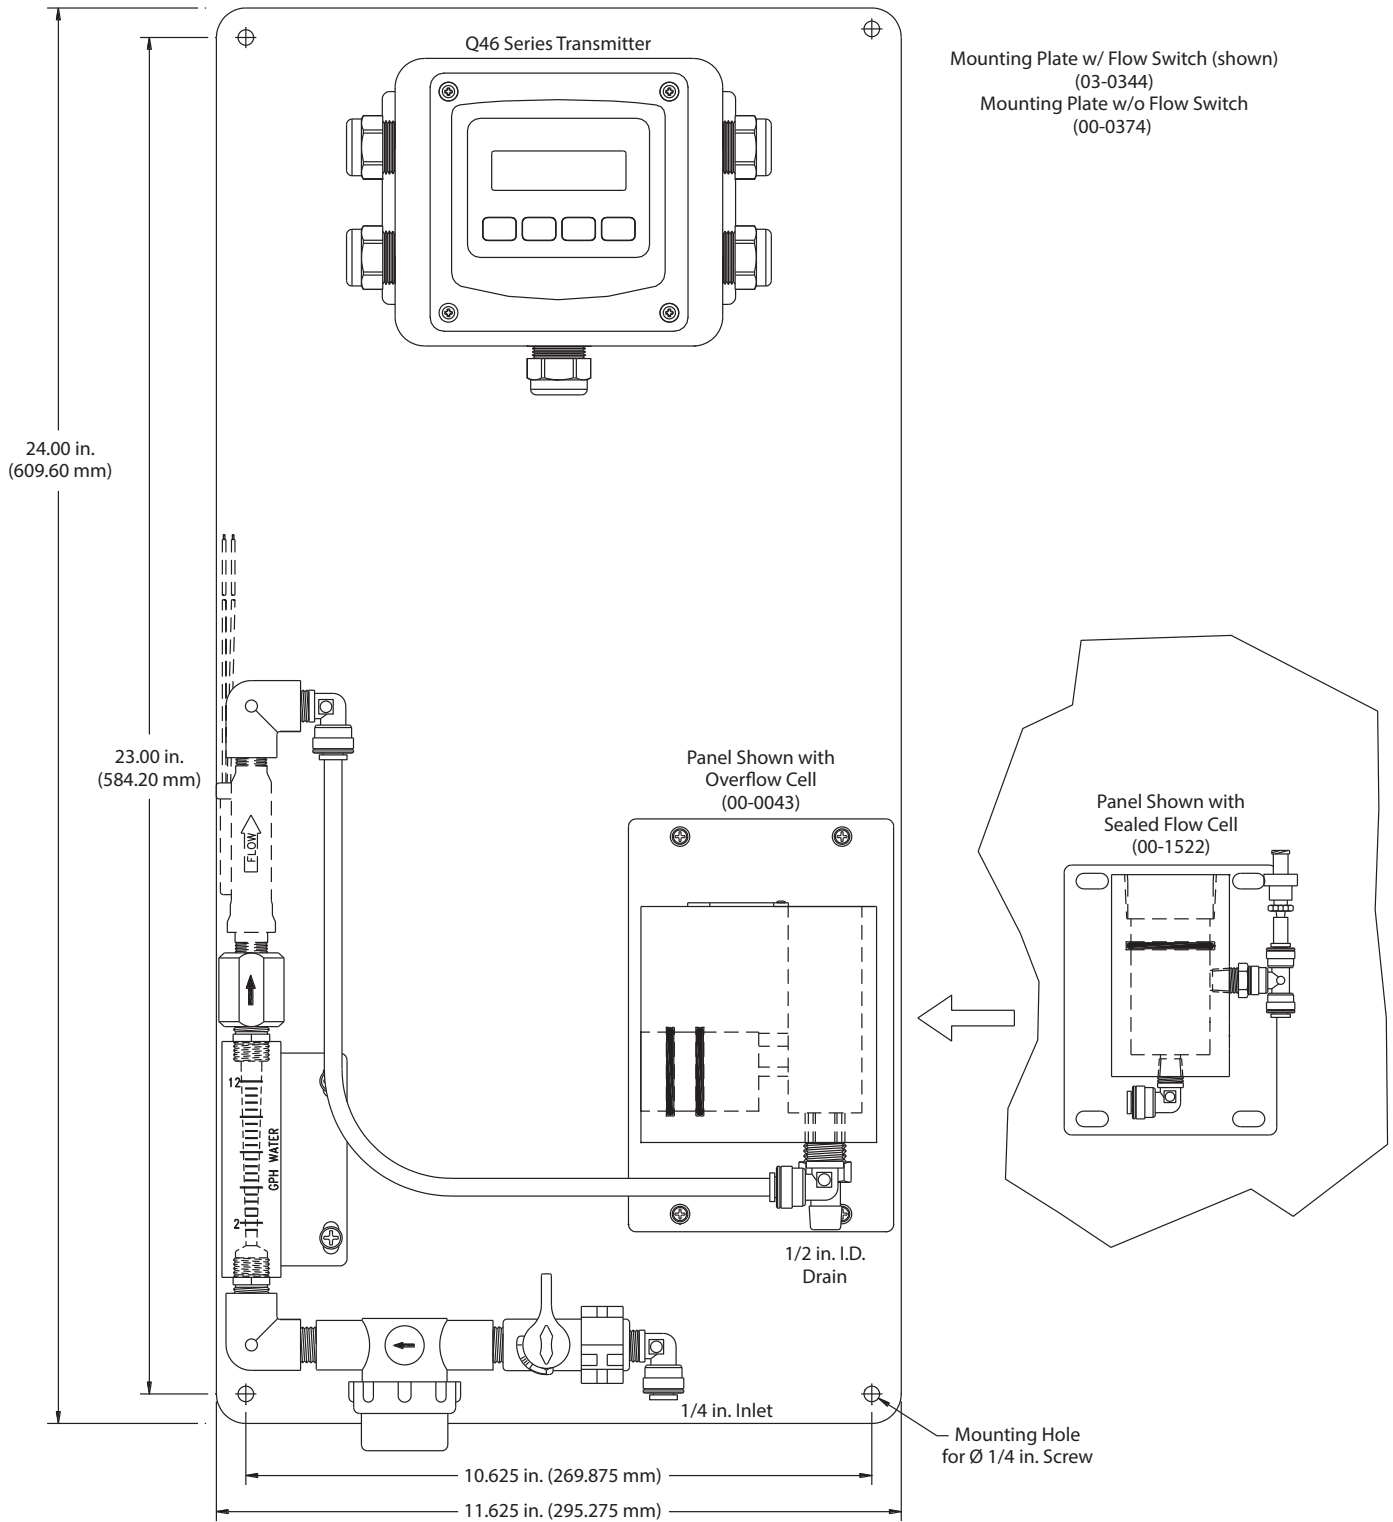


ATi-1224

ANALYZER DIMENSIONS (WALL MOUNT SHOWN)

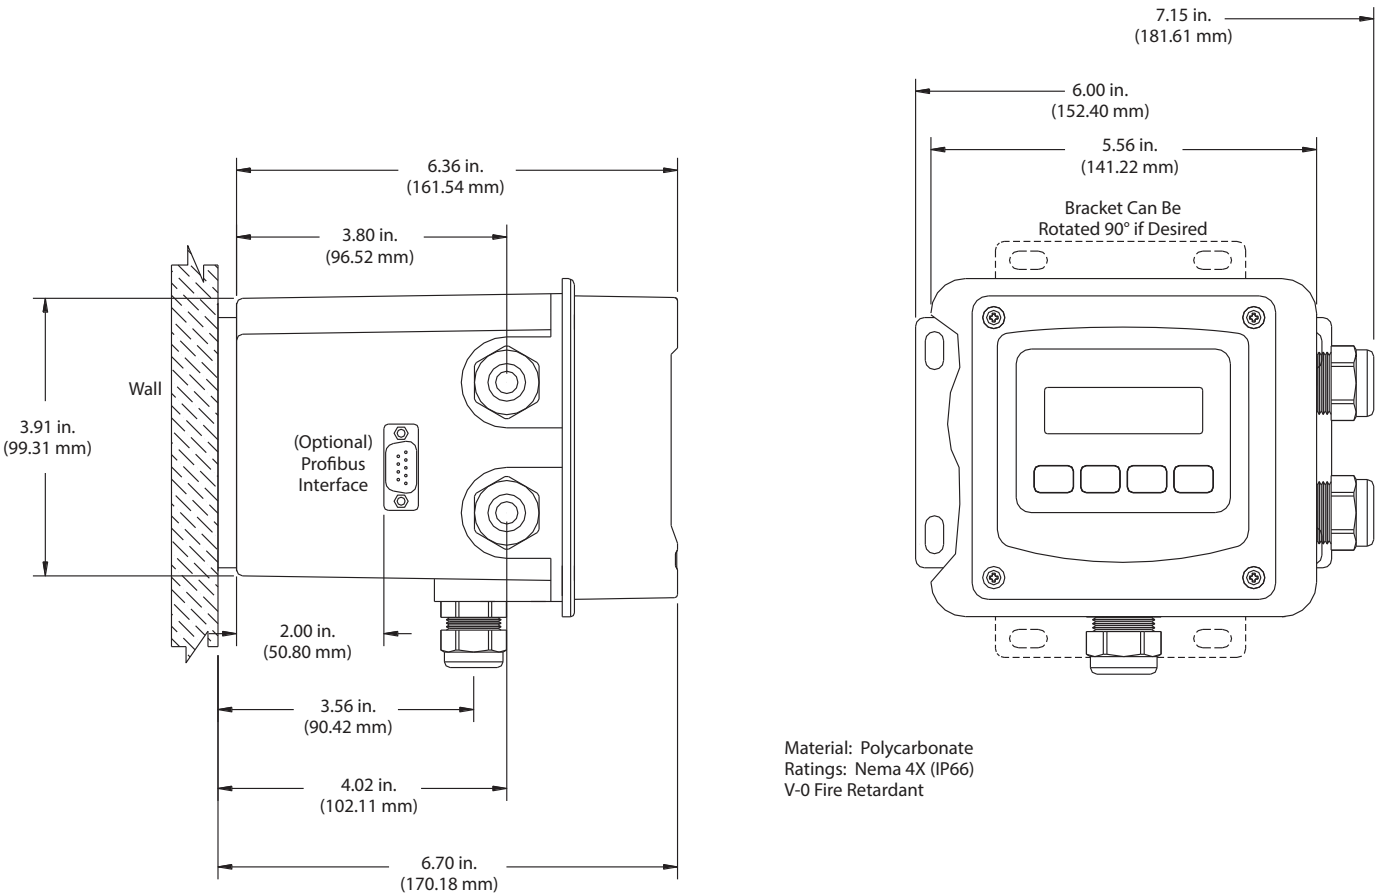


ATI-0926

JUNCTION BOX

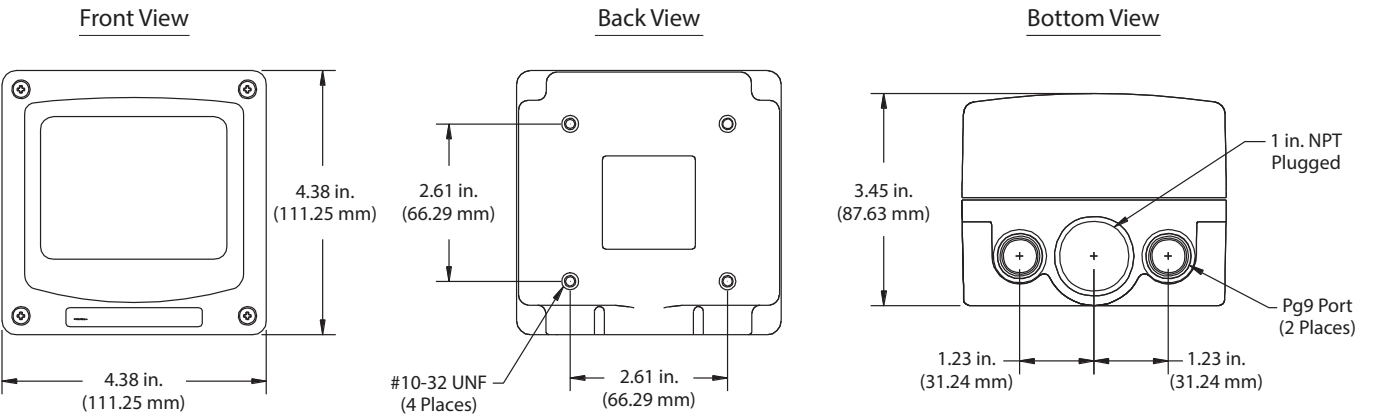


ATI-0655

PIPE MOUNTING

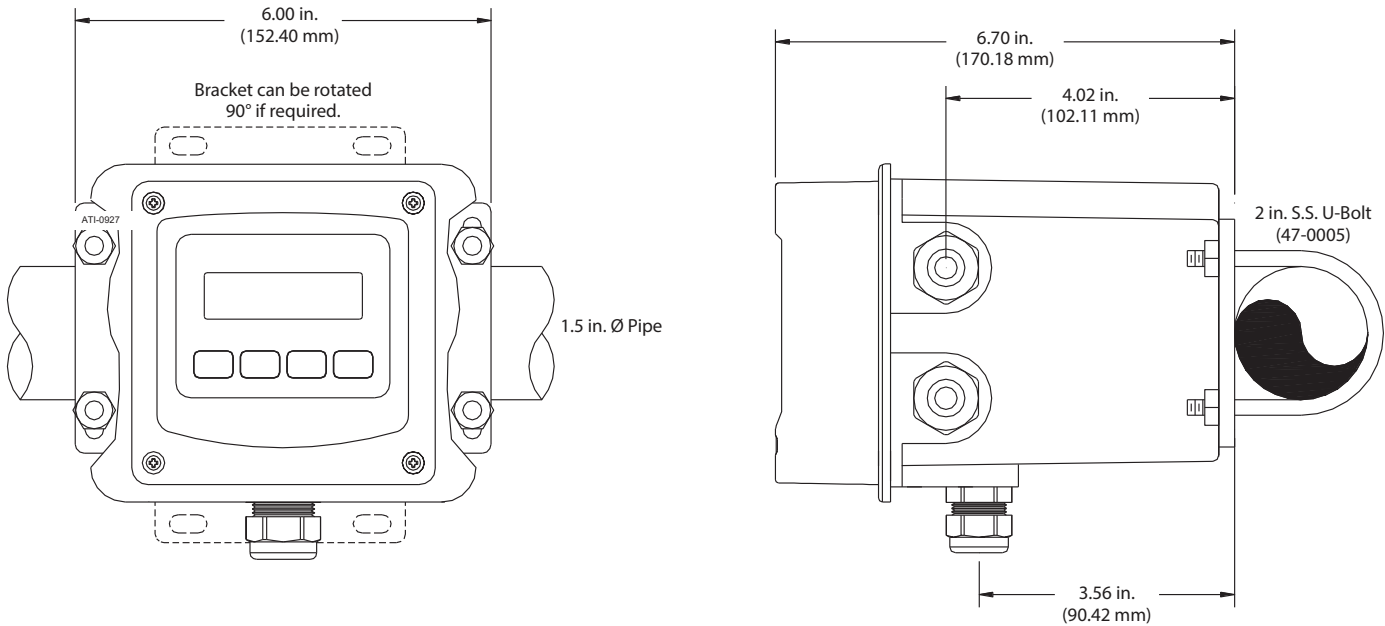


ATi-0927

PANEL MOUNTING

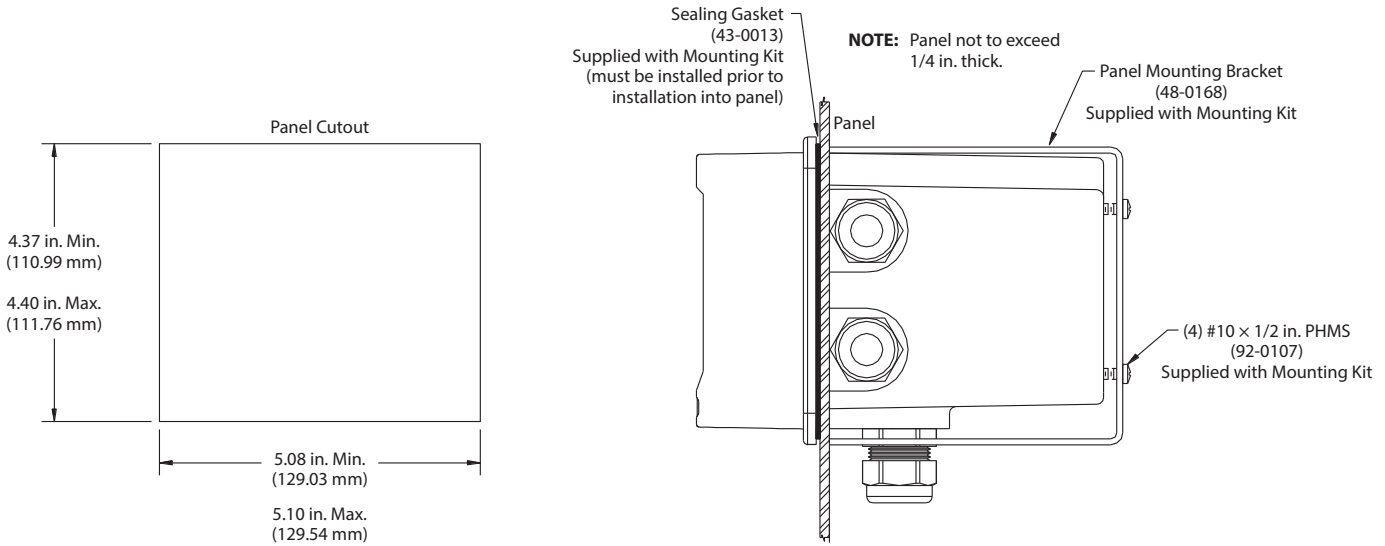


ATi-0928

FLOW SENSOR DIMENSIONS AND OVERFLOW CELL INSTALLATION

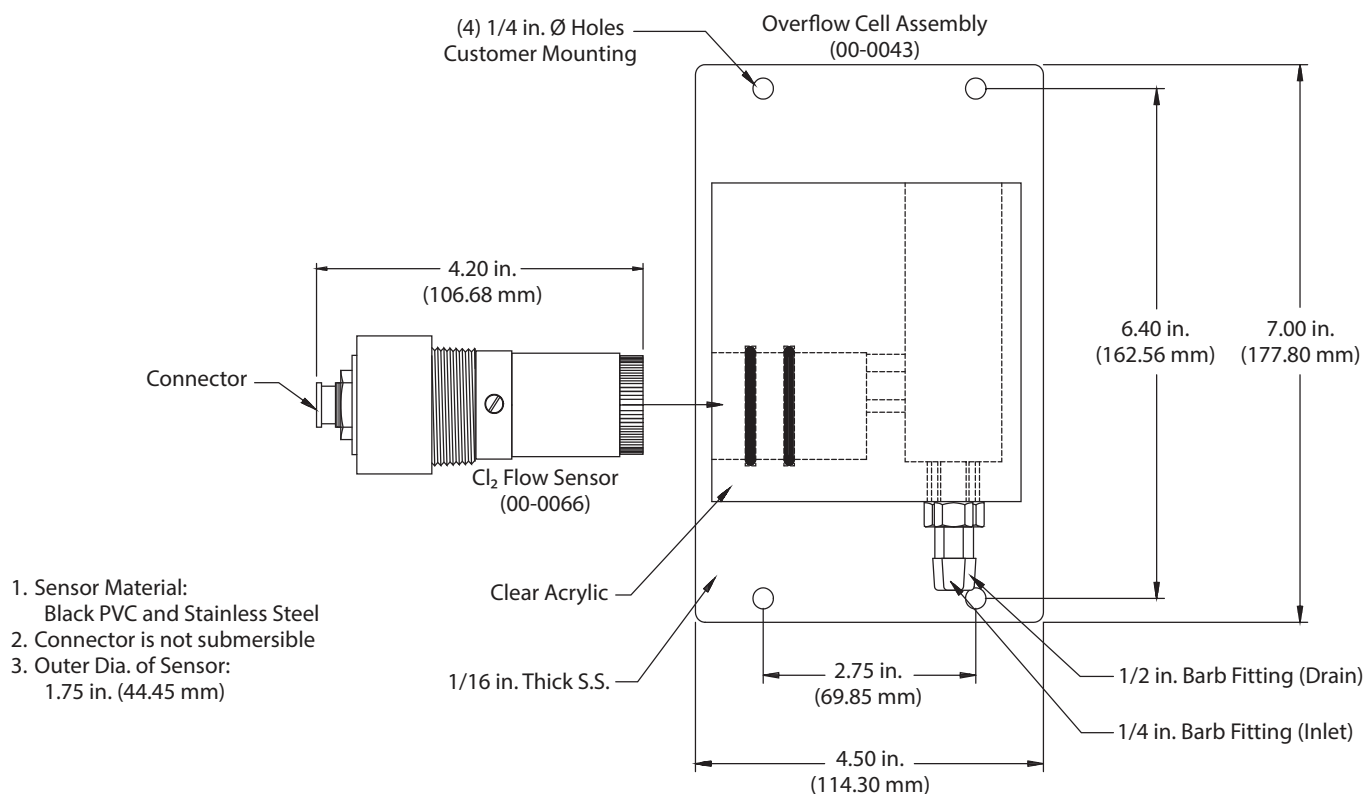


ATi-0196

CL2 SEALED FLOWCELL (00-1522) DIMENSIONS

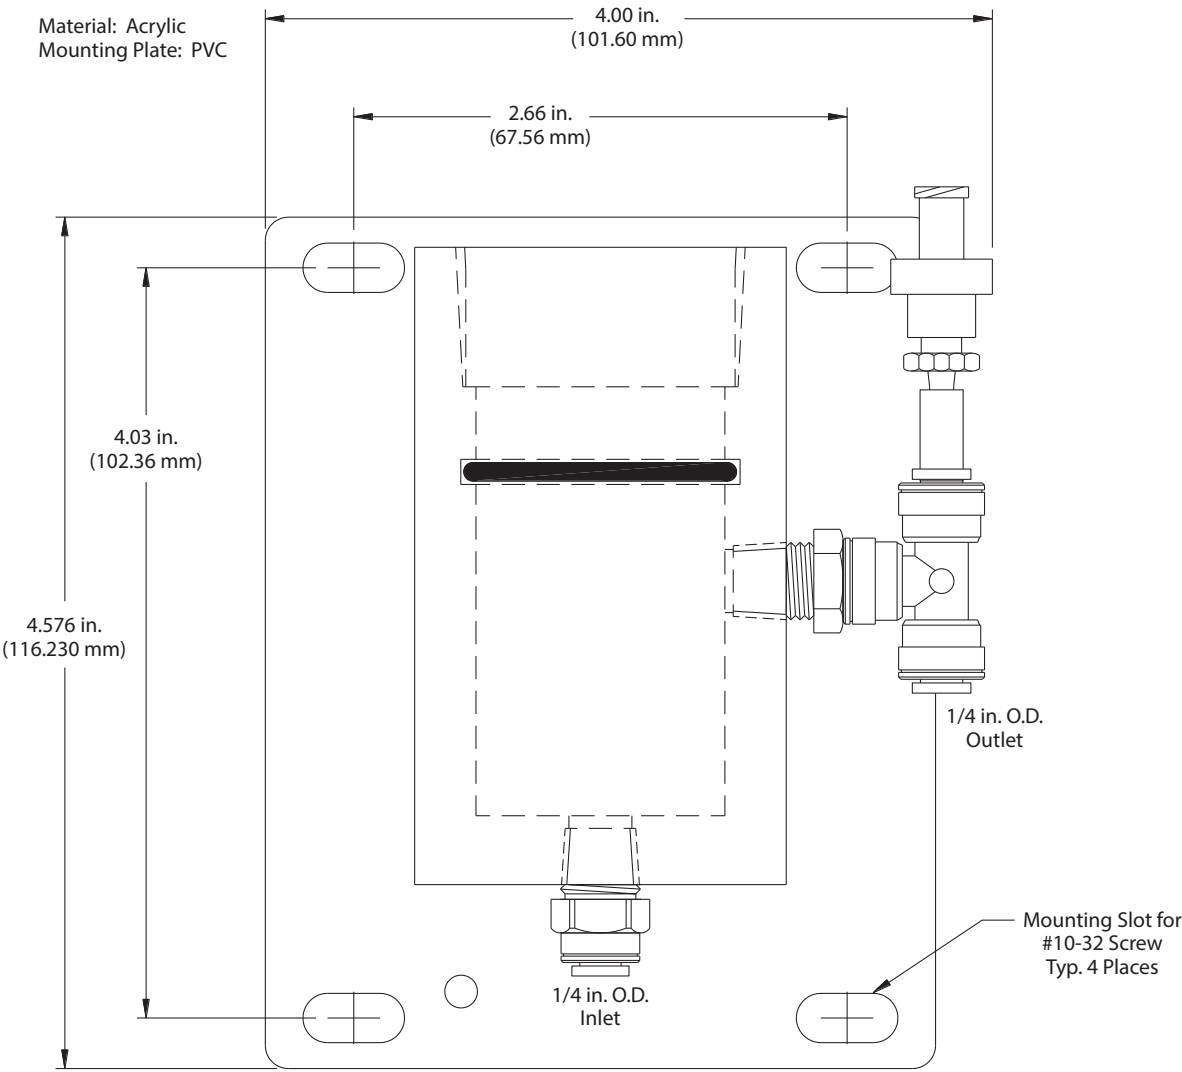


SUBMERSIBLE SENSOR DIMENSIONS

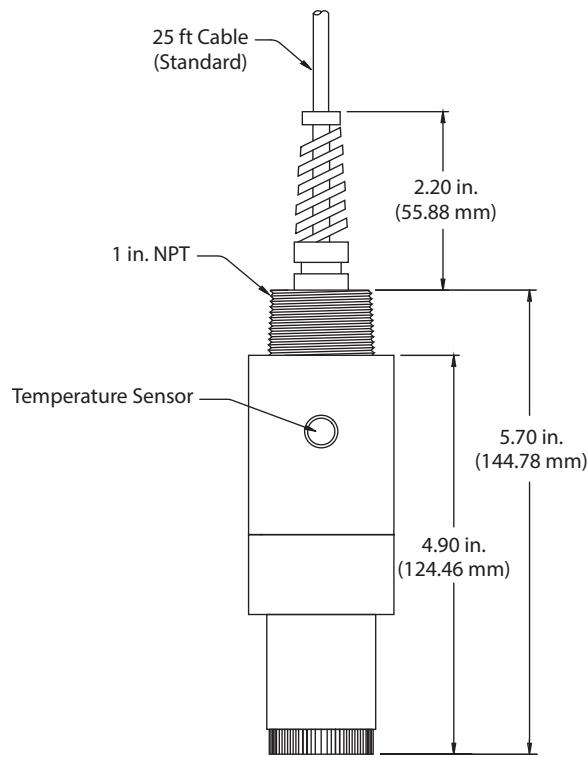


ATi-004

SUBMERSIBLE SENSOR INSTALLATION

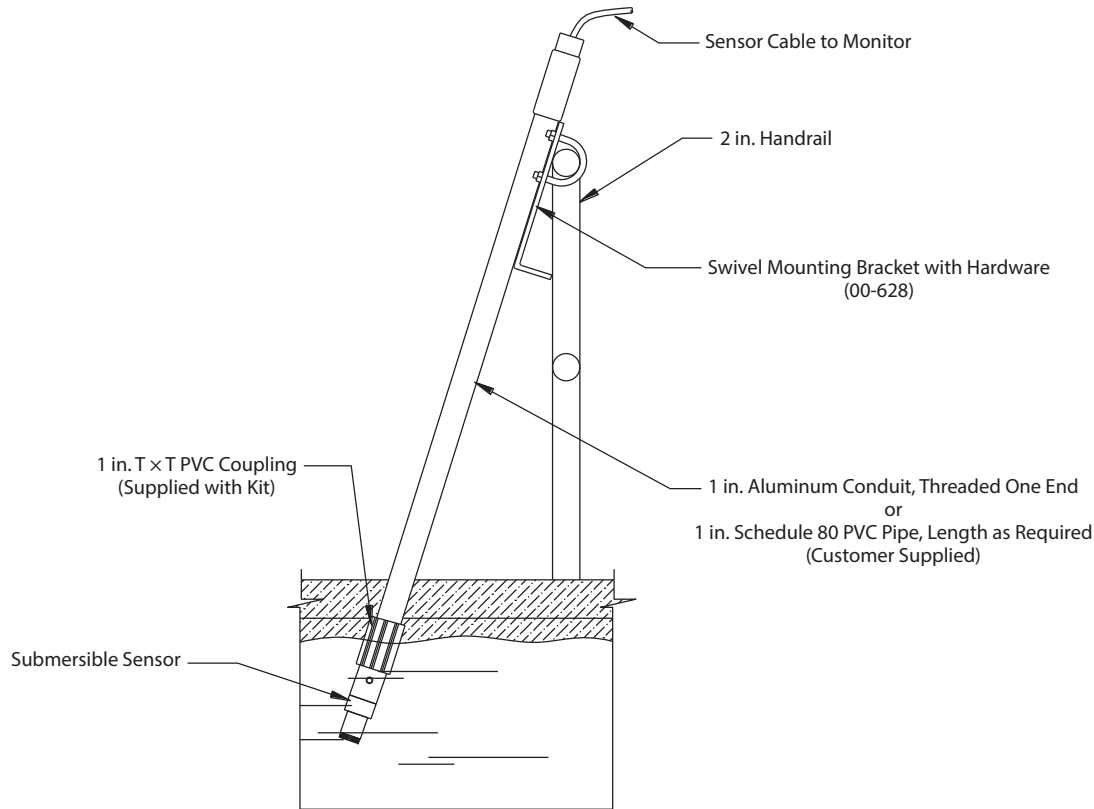


ATi-0155

POWER, RELAY AND OUTPUT CONNECTIONS

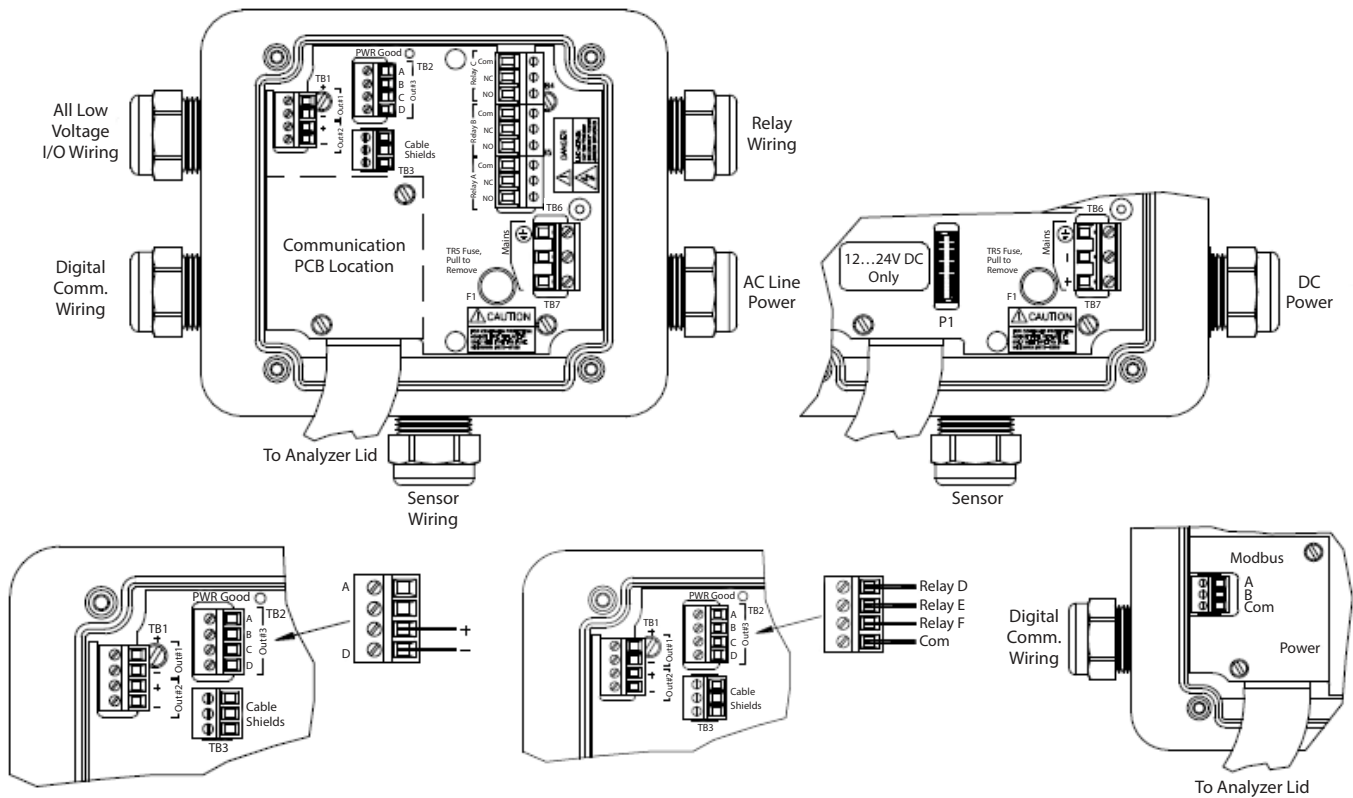


ATi-0930, -0932, -0933, -0989

RELAY WIRING TB4, 5, 6 DETAIL

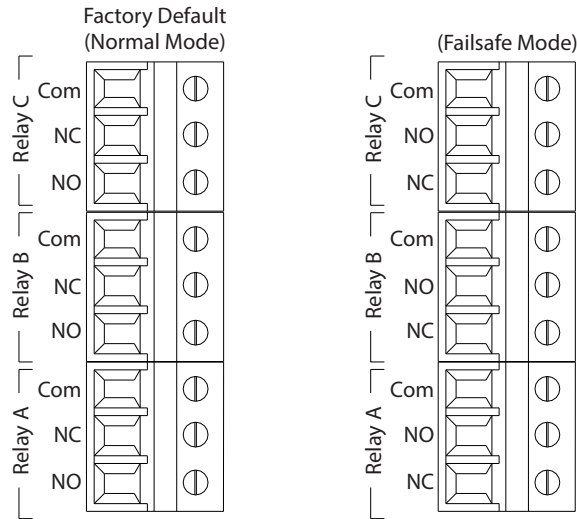

ATi-0931


ELECTRICAL CONNECTIONS

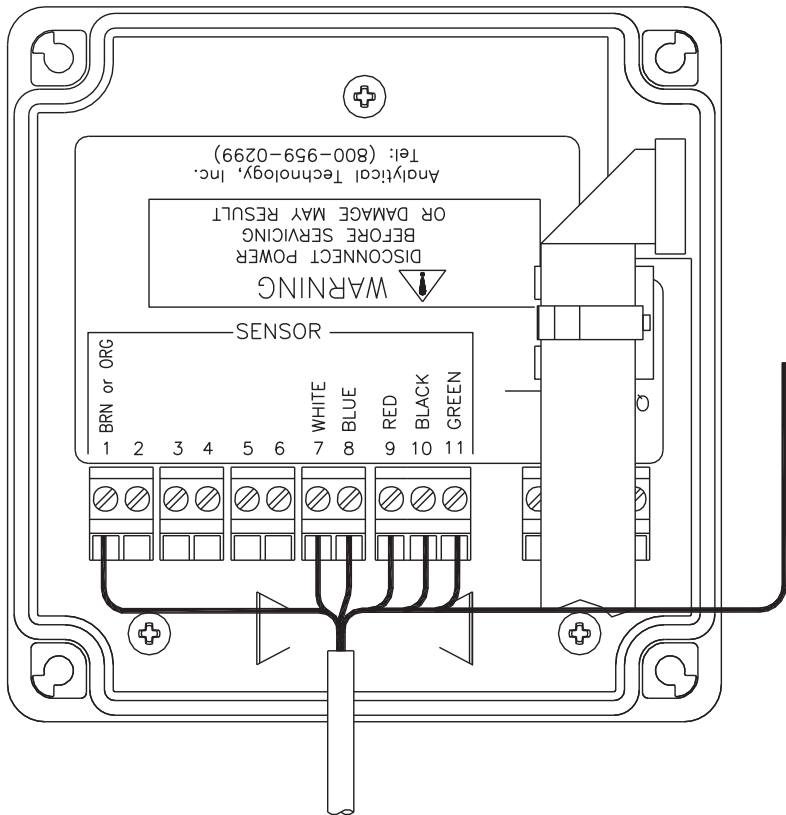

NOTE: Connect shield to T/B labeled "Cable Shields" located on P/S PCB inside of enclosure.

ATi-1002

REMOTE JUNCTION BOX SENSOR CONNECTIONS

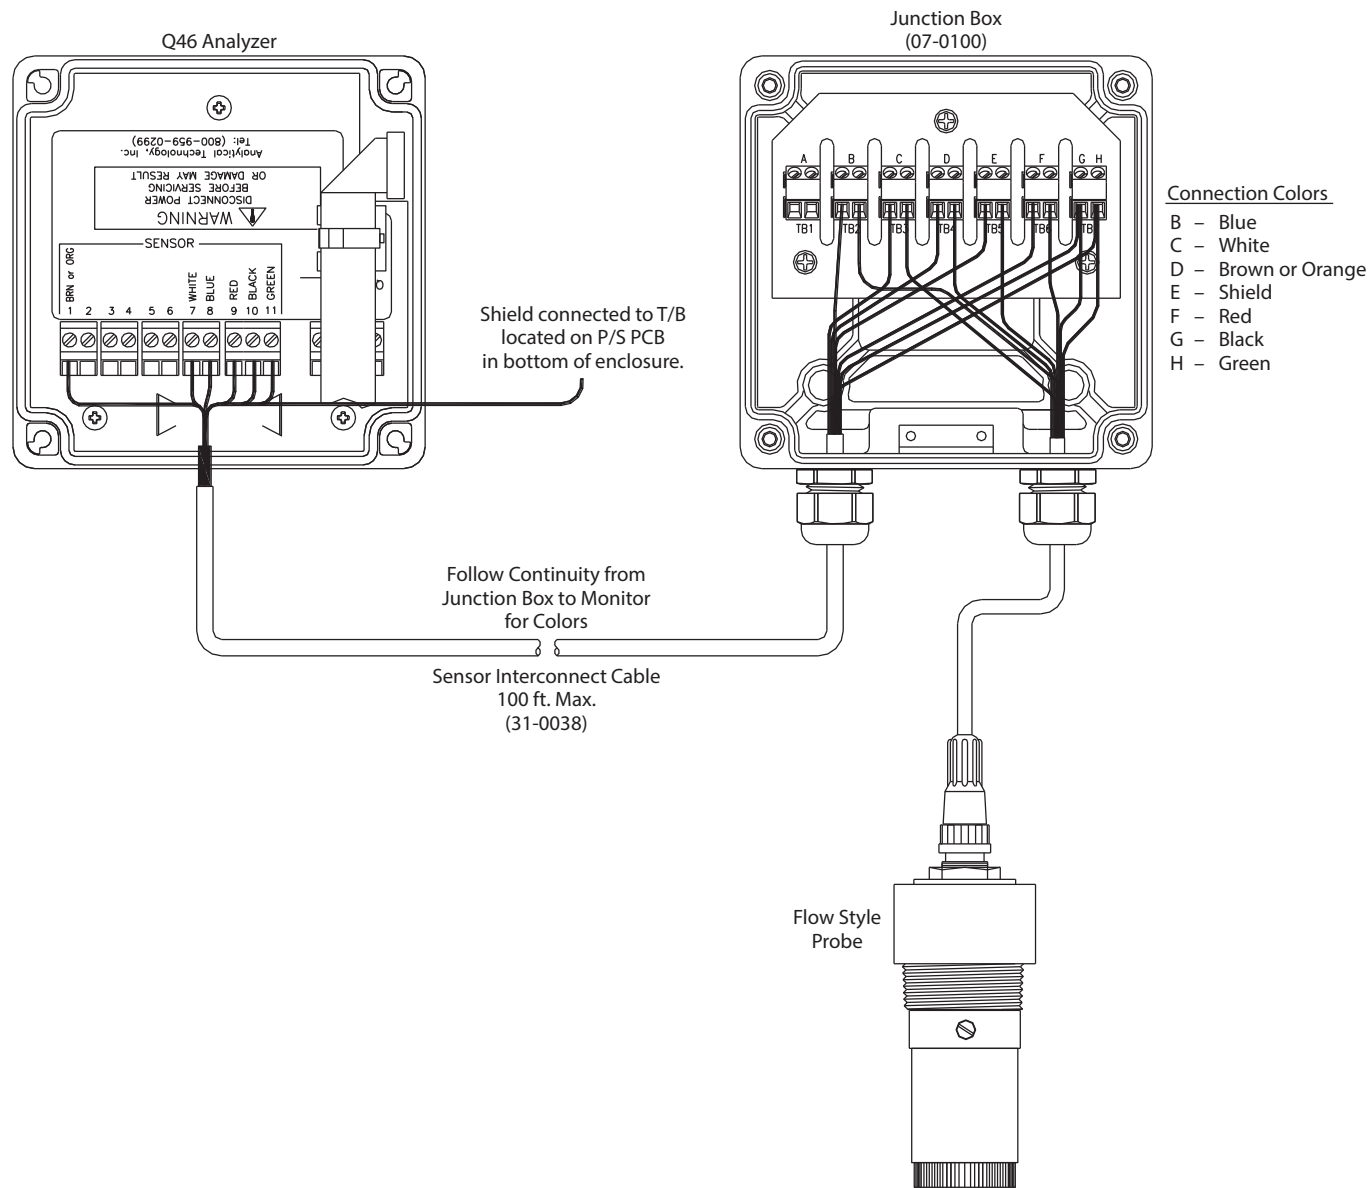

ATi-1017

